
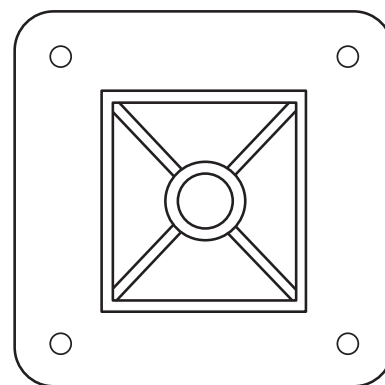
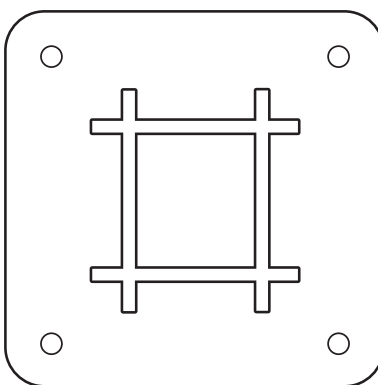


POST MOUNT INSTALLATION

STEP ONE

Position post mounts on center where center of post will be. Using the base as a template, mark holes.

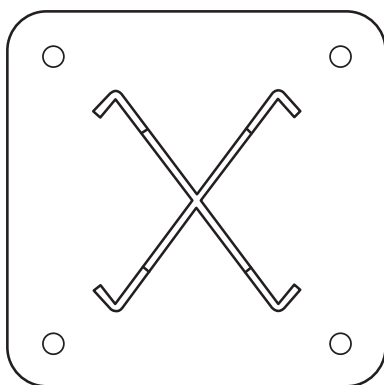

TOP VIEW OF TYPICAL MOUNTS

Remove mount, if fastening to a deck or screw-able substrate, use either lag screws or pre-drill and use lag bolts. If fastening to concrete, use a hammer drill and masonry bit to drill holes. Then, using concrete anchors and bolts, fasten post mount.

STEP TWO

